
How to Add and Delete Home Screens on the Samsung Galaxy S3

Getting to the home screen


- Go to any home screen and long press the screen
- Choose add to home screen
- Touch the page tab

All of your home screens are now displayed and can be edited, deleted or rearranged. The Galaxy S3 comes with seven home screens.

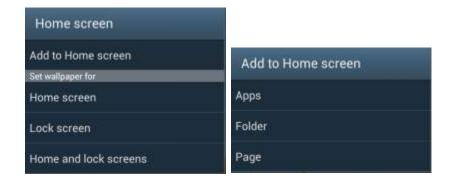

Deleting a home screen

- Pick the screen from the seven now shown and drag it to the trash can icon
- Press ok to confirm removal

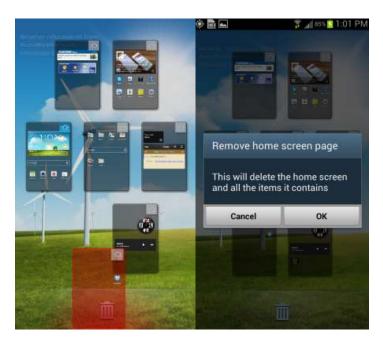

Adding a new home screen

- Touch the blank home screen with the (+) and a new screen will be placed on the screen
- Now add app icons or widgets to the new home screen

