

PRODUCT SPECIFICATIONS



Freeform™

INFORMATION GUIDE

ADDITIONAL FEATURES

- One Touch Speakerphone
- Shortcut Keys
- Music Player
- Bluetooth® Profiles Supported: HSP, HFP, OPP, A2DP, FTP
- GPS Enabled*
- Text Messaging Service Support*
- Internal Antenna
- Vibration Alert
- 72-Tone Polyphonic Ringtones
- Multilingual Text Display (English, Spanish)
- Personal Tools (Calendar, Memo Pad, Alarm Clock, World Time, Calculator, Stop Watch, Converter, Tip Calculator)
- Voice Recognition Services
- Audio Formats Supported (MP3, CMX, AAC, AAC+, Midi)
- Location Based Services*

TECHNICAL SPECIFICATIONS

- CDMA 800MHz/PCS 1900 Mhz, AWS Band 1700/2100 MHz
- Dimensions: 2.4" x 4.42" x .50" inches
- Weight: 3.63 ounces
- Main Display: 2.2" QCIF, 262K TFT LCD
- Standard Battery: Lithium Ion, 1000 mAh
- Talk Time: Up to 6 hours
- Standby Time: Up to 200 hours
- Hearing Aid Compatibility: M4/T4

MEMORY

- Internal Phone Book
 - Up to 1000 Entries w/Multiple Contacts
 - One-, Two-, and Three-Touch Dialing
 - Last 90 Incoming, Outgoing and Missed Call Logs
- Internal memory:
 - User Memory Available: Up to 55MB
- External memory:
 - microSD™ Memory Card Support (up to 16 GB)

CALL MANAGEMENT AND SERVICES

- Voice Mail*
- Caller ID*
- Call Forwarding*
- Call Waiting*
- Three-Way Calling*


STANDARD PACKAGE CONTENTS

- Samsung Freeform™ Phone
- Standard Lithium Ion Battery
- Travel Charger
- User Guide


ADDITIONAL ACCESSORIES (ORDER AT 1-800-SAMSUNG OR SAMSUNG.COM/ACCESSORIES)



Travel Charger

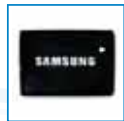

Lithium Ion Battery

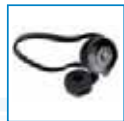

Stereo Bluetooth® Headset



Bluetooth® Earpiece



Car Charger



- Bar Design with QWERTY Keyboard
- 2.2" QCIF Display
- Customizable Shortcut Buttons
- Music Player
- Expandable Memory up to 16GB, and an internal memory of 54MB
- Stereo Bluetooth® Wireless Technology*
- Multiple Messaging Options** with Threaded Text Messaging
- Web-enabled**



"number one in brand loyalty eight years in a row"



Samsung mobile phones have been rated number one in brand loyalty by consumers eight years in a row, according to Brand Keys, a leading independent authority on brand loyalty.

* Many of the services and features described above are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas. Other conditions and restrictions apply. See carrier for more information. All talk and standby times are approximate. Battery performance depends on network configuration, signal strength, operating temperature, features selected, and voice, data, and other application usage patterns. Internet content/services designed for mobile devices.

** The Samsung Freeform™ supports Bluetooth Profiles for wireless handsets, hands-free accessories, and object exchange. Both devices must be compatible with object exchange profile. Copyrighted material cannot be transferred.

© 2009 Samsung Telecommunications America, LLC ("Samsung"). Samsung and Freeform are trademarks of Samsung Electronics America, Inc. and/or its related entities. Other company and product names mentioned herein may be trademarks of their respective owners. Screen images simulated.

06/2009

SAMSUNG TELECOMMUNICATIONS AMERICA
1301 E. Lookout Drive | Richardson, TX 75082 | 1.800.SAMSUNG

<https://training.samsungtelecom.com>
password: style



GET TO KNOW THE FREEFORM™

SAMSUNG



FEATURE BENEFITS

- The four-row QWERTY keyboard speeds text entry, and is ideal for heavy text users.
- A large, 2.2" QCIF 262K TFT color display makes web sites and pictures pop for a better viewing experience.
- Customers can play individual music files or create and play full playlists; the phone replicates a standalone MP3 player experience.
- Song files can be transferred from a computer onto an optional microSD™ memory card of up to 16GB, so users can carry their entire song library with them.
- Send and receive text messages in normal or Chat view, and see an entire string of messages, instead of just one line.

ABOUT SAMSUNG ELECTRONICS COMPANY

Samsung Electronics Co., Ltd. is a global leader in semiconductor, telecommunication, digital media and digital convergence technologies with 2007 consolidated sales of US\$105 billion. Employing approximately 150,000 people in 134 offices in 62 countries, the company consists of two main business units: Digital Media & Communications and Device Solution. Recognized as one of the fastest growing global brands, Samsung Electronics is a leading producer of digital TVs, memory chips, mobile phones and TFT-LCDs. For more information, please visit www.samsung.com.

SAMSUNG

HOW TO'S

HOW TO CUSTOMIZE THE SHORTCUT KEYS

To customize the navigation keys from the Idle screen:

1. Press **Menu>Settings**.
2. Select **Phone Settings**.
3. Select **Shortcut Key**.
4. Choose the key to be customized — up, down, right or left — and press **OK**.
5. Highlight the function desired from the list-- and press **OK**.
6. The screen will display a message indicating that the shortcut preference has been set. Repeat the process to customize the other two navigation keys.

TIPS: When typing a message, use the Fn key to toggle between typing numbers and letters. After pressing the Fn key, it will stay in 123 mode until the Fn key is pressed again to return to ABC mode. Pressing the shift key toggles alpha entry between mixed case (Abc), upper case (ABC), and lower case (abc).

HOW TO USE THE MUSIC PLAYER

From the Idle Screen press the **Menu/OK** key, select **Multimedia**, and then choose **Music Player**.
Note: before launching the music player, you must install a microSD™ memory card containing music files.

HOW TO LOCK AND UNLOCK THE PHONE

Press and hold the Space Bar to lock the phone. To unlock the phone press the Left Soft key, and then press the Space Bar key.

HOW TO CREATE A PLAYLIST

To create a playlist:

1. Launch the music player and press the **Library** soft key and select **Playlists**.
2. If there are no playlists, press the **Add** soft key; enter a name for your new playlist..
3. Highlight each file you want to add to your new playlist, press the **Mark** key, and then press **Done**.
4. To play your new playlist press the **Play** soft key.

FAQ'S

PAIRING BLUETOOTH® DEVICES

Q: How do you pair a Bluetooth® device with the Samsung Freeform™?

A: To pair a Bluetooth® device with the Samsung Freeform™, follow these steps:

1. Select **Menu > Tools > Bluetooth > Bluetooth Settings**.
2. Select **Discovery Mode > OK > On > OK**. If Bluetooth® is off, the phone will ask the user if they want to turn Bluetooth® on. Select the **Yes** soft key if this prompt appears.
3. Press **OK**. The names of the available devices appear in the display.
4. Highlight the device to be paired and press **PAIR**. The user will be prompted to enter the passkey or PIN for the selected device.
5. Enter the device passkey or PIN and press **OK**.
6. Press the **Yes** soft key to pair the devices.

SAVING PHOTOS ON THE MICROSD™ MEMORY CARD

Q: Can my customer set the phone so all photos are saved on the optional microSD™ memory card, instead of the phone's memory?

- A:** Yes, users can specify where they want photos to be saved.
1. Activate the camera by pressing the Camera button on the side of the phone or choosing **Menu > Multimedia > Camera > OK**.
 2. Press the **Options** soft key.

3. Use the right **Navigation** key to highlight the Tools icon at the top of the display.
4. Press **OK**.
5. Highlight **Card > OK**. The photos will be stored on the optional microSD™ memory card.

TRANSFERRING MUSIC FILES TO A COMPUTER

Q: To transfer music from a computer to the phone using the optional data cable:

- A:** Yes, users can specify where they want photos to be saved.
1. Make sure an optional microSD™ memory card is installed in the phone.
 2. With the phone in the standby mode, connect the smaller end of the data cable to the power-accessory connector on the right-hand side of the Freeform™.
 3. Connect the larger end of the data cable to the PC. The words "Connected to PC" will appear in the phone's display. The phone will appear as a removable disk on the PC screen.
 4. Copy or transfer music files to the My Music folder on the phone.
 5. Press the **Done** soft key. A message will appear, asking if you want to "Exit USM mode?"
 6. Press the **Yes** soft key. The phone will return to the standby mode.
 7. Disconnect the data cable.